


Cambridge Lambretta

Bolt-On damper kit for Lui/Luna/Vega/Cometa

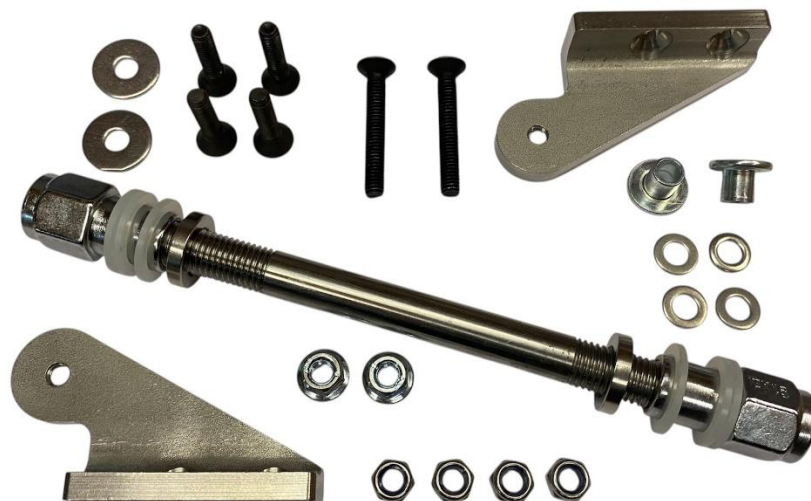

1. Remove your front wheel
2. Remove the original axle shaft and replace this with the, to the kit included, longer one (the metal washers are for the fork links, so swap your existing ones to these)
3. Remove the lower rubber/bush from your dampers
4. Fit the bottom of the dampers (please use grease or similar) to the axle with one nylon washer on the outside of the damper and two on the inside of the damper, and put the nuts on loosely.



5. Mount the front wheel to the fork.
6. Fully extend the dampers and swing them up so they are roughly in position of where they will sit. These holes will need drilling into your forks (using masking tape to protect the paint), mark and drill these holes (6mm) as appropriate. Once done, secure these bolts with Loctite 243 and tighten them to 10lbft/13Nm.



7. Fit the dampers
8. Tighten the top nuts to 7,5lbft/10nm and the bottom big nuts to 40lbft/55Nm.



For race use only! Not admitted in the area of the german StVZO and when you want to use it on the road, please contact your local vehicle licensing authority first!

